

The EVAPORATOR (heat exchanger) is located outside of the water tank for easy inspection and servicing. The evaporator is SELF CLEANING due to the high water flow rate.



FEATURES FOUND IN ALL UNITROL CHILLERS