


# PRE-PLUMBED SOFT TOUCH KIT SUPPLIED IN OPTION #9181-34W, FOR HEAVY RAM APPLICATION

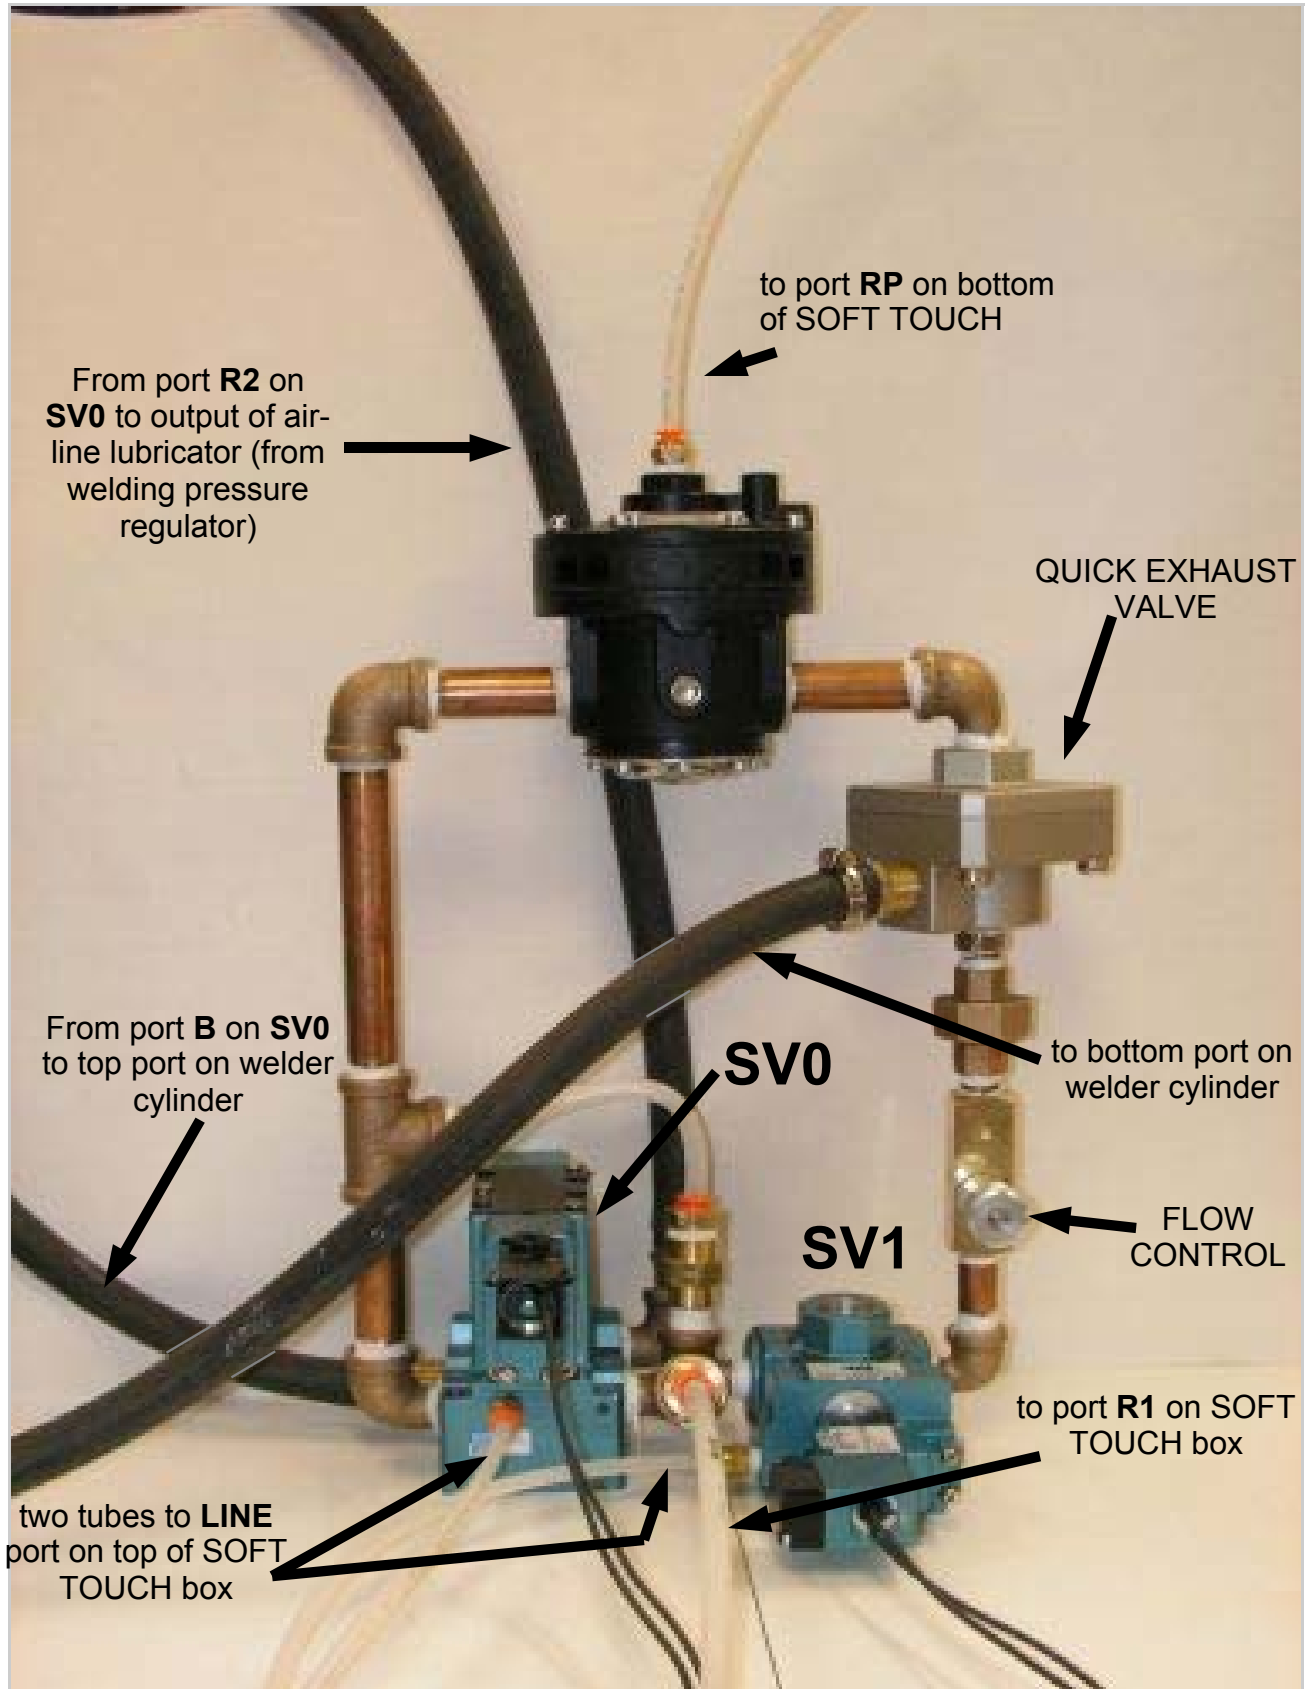

- DIRECTIONS:**
1. Mount both cylinders to top of welder
  2. Connect tubing and hoses as shown above.