


INTERTRON 105/106 SOFT TOUCH HOOKUP

Connect wires from the SOFT TOUCH cable to the INTERTRON MODEL 105 AND 106 CONTROLS as shown below. The original solenoid valve will not be used with this SOFT TOUCH system.

TOP TERMINAL 1-23 = **TB1**

BOTTOM TERMINAL 1-10 = **TB2**

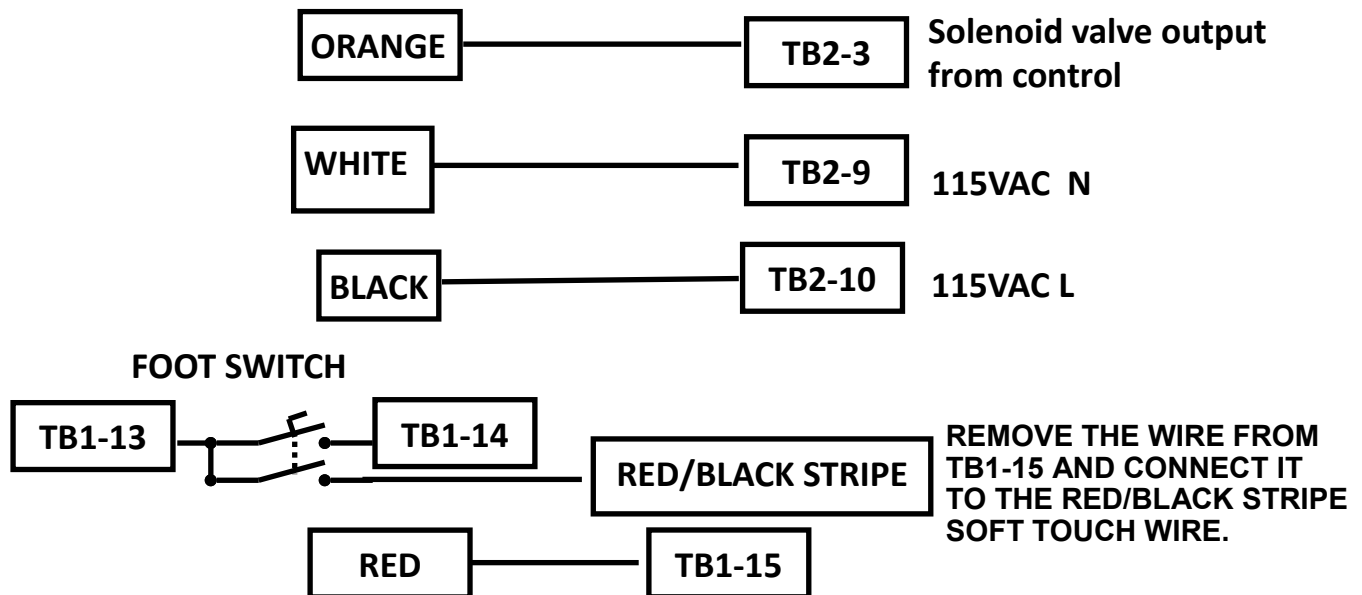

If a jumper is between TB14 and TB15, remove it before connecting the RED wire to TB1-15.

NOTE: If only a single-stage foot switch is being used, connect the RED/BLACK STRIPE wire to TB1-13.

If RETRACT option 9181-34JA or 9181-34JB is in this system:

